

Casserole Carrier

Difficulty Level: Easy




What you need

- 1.4 m of Cotton Fabric
- .7 m of Pellon® Insul-Fleece™
- Two 12" Wooden Dowels
- 9" Hook and Loop Tape

Tools:

- Sewing Machine
- Tape Measure
- Scissors

Instructions

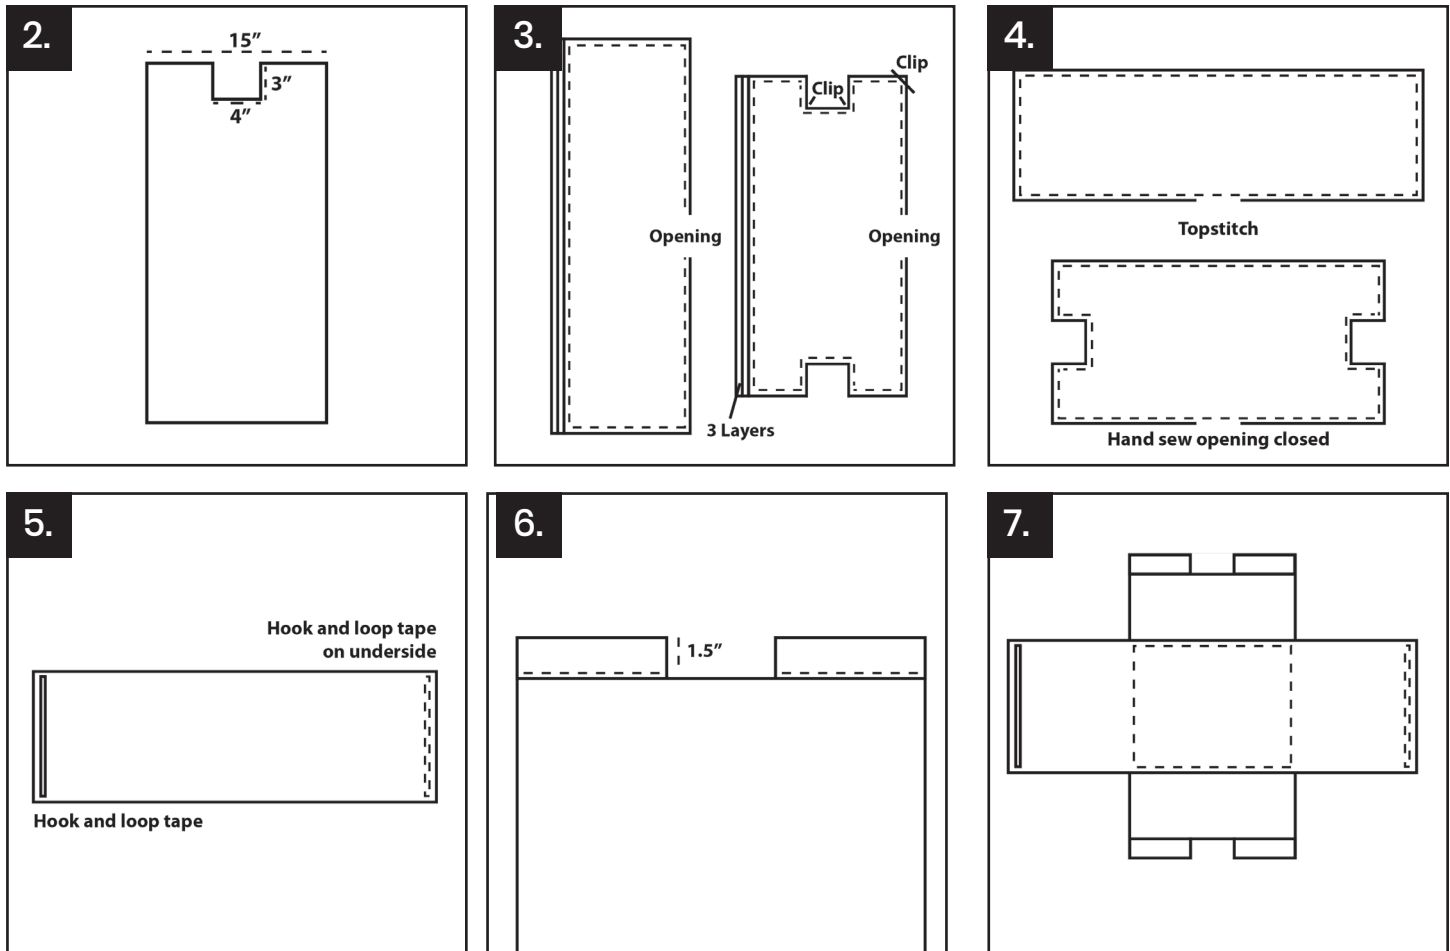

Instructions

1. Cut two pieces of cotton fabric, and one piece of Insul-Fleece™ 12"x37".
2. Cut two pieces of cotton fabric and 1 piece of Insul-Fleece™ 15"x30". On the 15" side, cut out a 4"x3" rectangle from the centre of all layers.
3. Layer the 12"x37" pieces of cotton right sides together with the Insul-Fleece™ on top. Stitch a 1/2" seam around the entire piece, leaving a 5" opening in the centre of the long edge. Repeat with the 15"x30" pieces of fabric. Cut the corners, and clip inside the rectangular cut out.
4. Turn both of the the pieces right side out, and hand stitch the openings closed. Then press and topstitch.
5. On the 12"x37" piece, sew hook and loop tape on each short edge.
6. On the 15"x30" piece, fold the flaps down and sew the long edges to create a pocket for the dowels.
7. Lay 12"x37" piece on top of the 15"x30" piece, centering the two layers. Stitch around 4 sides to secure the layers together.