

Printed Padded Headband



What you need:



Measuring tape



Quilting Pins



Craft Scissors



Hot Glue Gun



Hand Sewing Needle



Black Thread




8" (20 cm) Craft Cotton




Headband



4" (10cm) Bonded Poly Batting

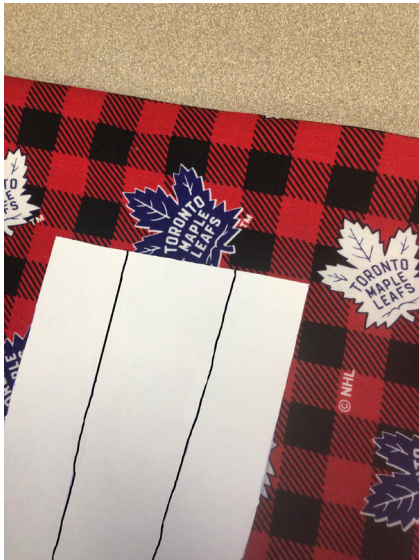


Step 1: Fold fabric in half.
Line up inner pattern piece
lines with the fabric design
that you would like visible.
(See pattern)

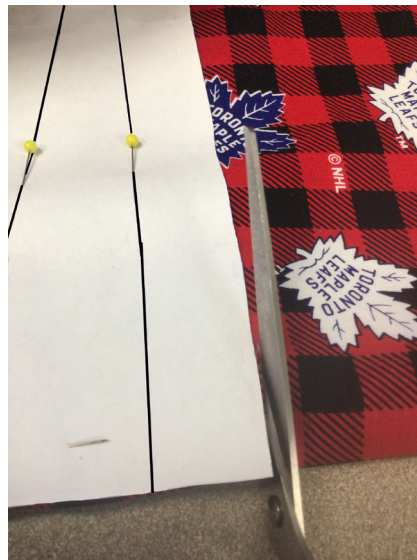

Step 2: Cut pattern piece on
fold.




Step 3: Pin right sides together
and sew half of the strip of
fabric.

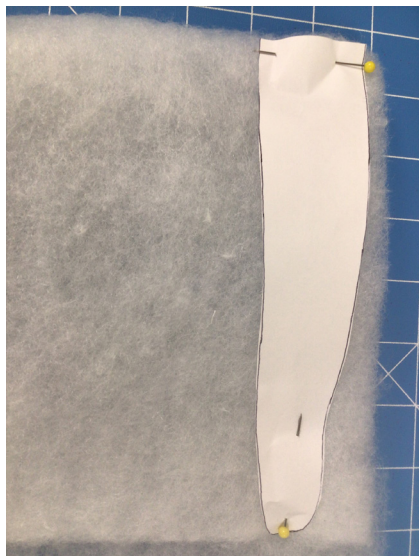

Step 4: Cut 2 layers of Poly-Batting on fold.



Step 5: Pin batting to the headband and on each side and centre.

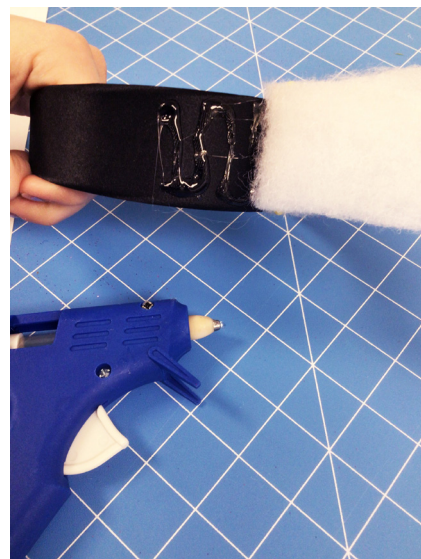

Step 6: Remove the side pin and glue the batting to the headband on each side.



Step 7: Pull half of the sewn fabric over the headband. Hand sew the other half to finish.



Headband Pattern

